# **RF RGBW Remote Controller**








Important: Read All Instructions Prior to Installation

### **Function introduction**

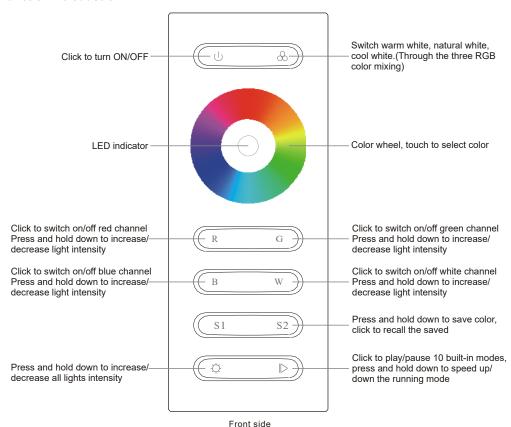

0 0 0 0 4.5V(3xAAA battery)


Back side

### **Product Data**

Output	RF signal	
Operation Frequency	868/915/434MHz	
Power Supply	4.5V(3xAAA battery)	
Operating temperature	0-40°C	
Relative humidity	8% to 80%	
Dimensions	120x48x17.6mm	


- Control 1 zone of RF receiver
- · RGBW color controller
- · Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- · Waterproof grade: IP20

### Receiver

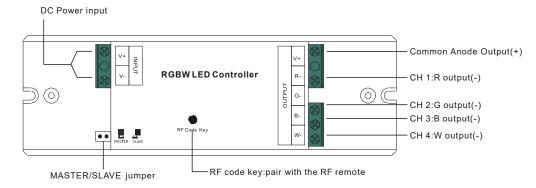

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)
12-24VDC	4x5A	4x(60-120)W	Constant voltage	145x46.5x16mm

## Wiring Diagram

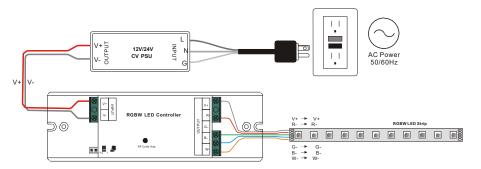

### Operation

### Pair with RF receivers:

Turn on the remote  $\Rightarrow$  Click "RF Code Key"  $\Rightarrow$  Touch the color wheel  $\Rightarrow$  LED lights connected with the remote  $\Rightarrow$  The receiver is paired with the remote successfully.

### How to delete the pairing:

Press and hold down "RF Code Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.